



[Down tilt/25%]: Short press to down tilting; long press for 1.5s to run to the IP3 limit position, the default is 25%.

 


[Channel Setting]: Under the cover on the back of remote control, it is used for learning codes, and the controller or motor will receive and process only after entering the learning code state Unpaired channel setting button.


◆ Combination button function




[Channel left selection]+[Stop]: Reversing the controller or motor enters the learning code state before processing the matched commutation function code.



 
[Stop]+[Up/Open]: Press and hold for 5s to enter the ready to start hand-pulled function.



 [Stop]+[Down/Close]: Press and hold for 5s to enter the preparation to prohibit hand-pulled function.



 
[Channel Setting]+[Up/Open]: Long press for 5s to make the motor enter the state of setting the up/open limit position.




[Channel Setting]+[Down/Close]: Long press for 5s to make the motor enter the state of setting the down/close limit position.



 
[Up/Open]+[Down/Close]: External control mode switching, the controller or motor will only be processed after receiving the paired mode switching function code after entering the setting code state.



 
[Channel setting]+[75%]: Short press to set the IP1 limit position, long press to set the 75% flush position.



 
[Channel setting]+[50%]: Short press to set the IP2 limit position, long press to set the 50% flush position.



 [Channel setting]+[25%]: Short press to set the IP3 limit position.



 
[Channel setting]+[Channel left]: channel is set to double channel mode, LED1 and LED4 on 3s, The channel will be 1 channel. Press [Channel left] or [Channel right] to switch the channel.



[Channel setting]+[Channel right]: channel is set to four channel mode, LED1 and LED4 on 3s, The channel will be 1 channel. Press [Channel left] or [Channel right] to switch the channel.




[Channel left]+[Channel right]: switch to group control function, can control all the motor paired by any channel. If press again, switch to single channel control.

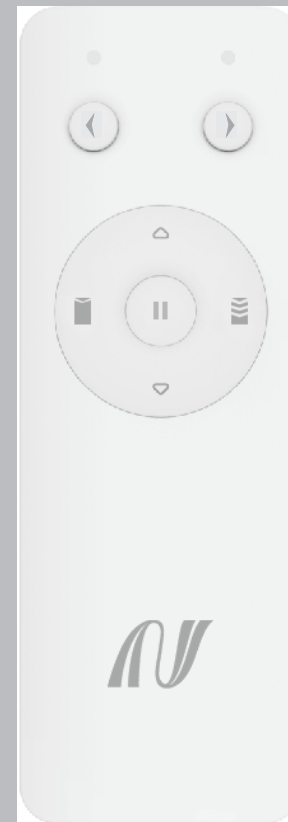

# RS2004 Remote control manual


# product information

## 1. Product size

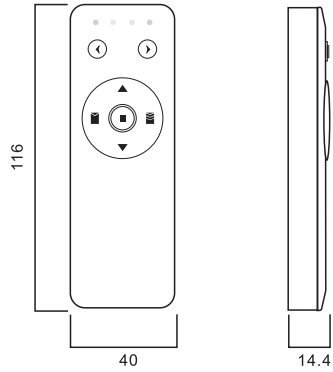

Note: The length L of the remote control depend on product specifications (unit: mm)

## 2. Button function

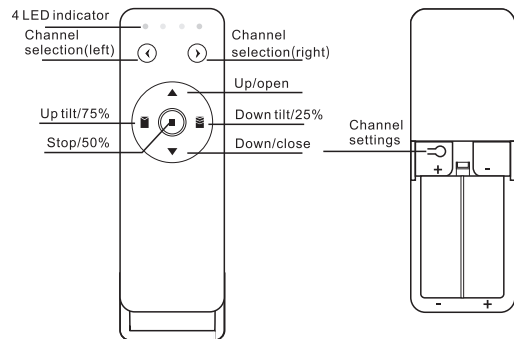

Note: The [channel setting] button is under the cover on the back of remote control.


## 3. Product Specifications

 Product model	YR3202		
Transmit frequency	433.92MHz±75KHz	Modulation	ASK
Battery model	AAA BATTERY X 2 pcs	Transmit channel	4


Note: Reverse battery polarity will damage the remote control!

# LED indicator function

### ◆ Two channels modes



 LED 1 is channel 1, and flashing LED indicates the signal is transmitting.




LED 4 is channel 2, and flashing LED indicates the signal is transmitting.


### ◆ Four channels modes



 LED 1 is channel 1, and flashing LED indicates the signal is transmitting.



 LED 2 is channel 2, and flashing LED indicates the signal is transmitting.




LED 3 is channel 3, and flashing LED indicates the signal is transmitting.




LED 4 is channel 4, and flashing LED indicates the signal is transmitting.

# Channel setting
 
### ◆ The way to switch two channels and four channels modes




 The max current channels modes is set to 2 channels.




The max current channels modes is set to 4 channels.

### ◆ Double channel mode

 


 Select the previous channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.




Select the latter channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.

### ◆ Four channel mode

 


 Select the previous channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 4→channel 3→channel 2→channel 1. If there is no operation within 3 seconds, the LED will go out.




Select the latter channel: When the remote control LED is off, press the [channel left selection] button, the indicator of the current channel will light up, press it again within 3 seconds. Press the [channel left selection] key, and select channels circularly in the order of channel 1→channel 2→channel 3→channel 4→channel 1. If there is no operation within 3 seconds, the LED will go out.

### ◆ Group control channel

 

 Press the [channel left selection]+[channel right selection] keys at the same time switch to group control channel. (If in double channel mode, LED1 and LED4 last on 3S, if in four channel mode, LED1, LED2, LED3, LED4 last on 3s)



Press [channel left] or [channel right], will get back to the single channel mode.

# Button function

### ◆ Single button function



[channel left](in four channel mode): turn left, Select channels circularly in the order of channel 1→channel 4→channel 3→channel 2→channel 1.



[channel right](in four channel mode): turn right, Select channels circularly in the order of channel 1→channel 4→channel 3→channel 2→channel 1.



[Up/Open]: Open the curtain.



[Down/Close]: Close the curtain.



[Up tilt/75%]: Short press to up tilting; long press 1.5s to run to the IP1 limit position, the default is 75%.



[Horizontal position/50%]: Short press to horizontal position; long press for 1.5s to run the IP2 limit position, the default is 50%.